

Telephone:
Fax:
KMKR Nr.:

1	Accelerator pedal position (APP) sensor - above pedal
2	Accelerator pedal position (APP) switch - in APP sensor
3	Barometric pressure (BARO) sensor,->08/94 - above fascia relay plate
4	Barometric pressure (BARO) sensor, 09/94->- in ECM
5	Brake pedal position (BPP) switch I/II - above pedal
6	Clutch pedal position (CPP) switch - above pedal
7	Crankshaft position (CKP) sensor
8	Data link connector (DLC) - adjacent to steering column
9	Engine control module (ECM)
10	Engine control relay - fascia relay plate, position 3
11	Engine coolant temperature (ECT) sensor
12	Exhaust gas recirculation (EGR) solenoid
13	Fuel injection pump
14	Fuel injection timing solenoid
15	Fuel quantity adjuster
16	Fuel quantity adjuster position sensor
17	Fuel shut-off solenoid
18	Fuel temperature sensor
19	Glow plug relay - fascia relay plate, position 12
20	Glow plugs
21	Injector needle lift sensor
22	Injectors
23	Intake air temperature (IAT) sensor
24	Manifold absolute pressure (MAP) sensor - in ECM
25	Mass air flow (MAF) sensor
26	Turbocharger (TC) wastegate regulating valve
27	Vehicle speed sensor (VSS) - transmission

