

Telephone:
Fax:
KMKR Nr.:

Pre-heating system

Glow plugs

Checking resistance - Fig. 7

Technical Data	
Resistance	0,4 Ω approx.

- Ensure ignition switched OFF.
- Remove glow plug.
- Check resistance between terminal and body.

Checking pre-heating - Fig. 8

Technical Data	
Glow period	20 secs. approx.

- Ensure ignition switched OFF.
- Disconnect engine coolant temperature (ECT) sensor multi-plug.
- Access glow plug terminal. Connect voltmeter between glow plug terminal and earth.
- Switch ignition ON.
- Check glow period.



